

Weekly Cleaning

Once a week, in addition to cleaning the pumps, hoses, and gun, you should clean the resin tank, as follows:

1. **Set up** to Clean (if not already set up):
 - **Turn on** the Propane Tanks
 - **Hook up** the water supply and turn the water on
 - **Turn on** the Propane on the Water Heater
 - **Start** the Generator and **turn on** the Breaker for the Pumps
 - **Start** the Water Heater
2. **Open** the valve on the Resin Tank (parallel to tank).
3. **Open** drain valve by mixing pump and insert drain hose into bucket.
4. **Open** the Large Three-Way Ball Valve left towards the mixing pump to discharge resin (gravity feed).
5. When the Resin Tank is empty, **close** the Drain Valve by Mixing Pump.
6. **Close** the Large Three-Way Ball Valve (straight up)
7. **Open** both Water Fill Valves and fill the Resin Tank with 10-15 gallons of hot water.



8. **Using the nylon utility brush** provided, **scrub** the inside of the Resin Tank
9. **Shut** both Resin water fill valves off
10. **Start** the Mixing Pump
11. **Open** the Large Three-Way Ball Valve left towards the Mixing Pump, allowing it to run for five minutes
12. **Close** the Large Three-Way Ball Valve (straight up)
13. **Turn off** the Mixing Pump
14. Now that you've scrubbed out the residue in the Resin Tank, **repeat steps 3-6 to empty the tank of residue**
15. **Open** the spray water valve and spray inside of Resin Tank with hot water to rinse
16. **Close** the spray water valve
17. Now **repeat steps 7-13** to clean out remaining residue
18. **Repeat steps 3-6** to empty tank
19. **Shut off/close** the following: Generator, Propane Valve, Water